

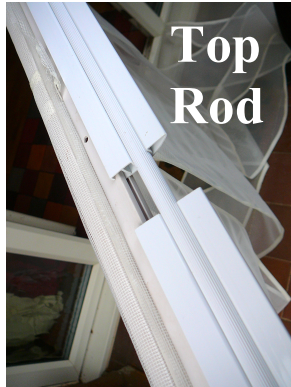


Sliding Panel Fitting Instructions

1. Measure the width of the door frame that you want to cover.
2. Assemble the Top Rod by placing the sections end to end and using the tube section to join them together to the length you require. You must cover the width of the doorway and which way you want it to slide.
3. Peel off the adhesive strip and stick either the hook or loop across the length of the flat side of the sections. Then press the hook and loop tape together.

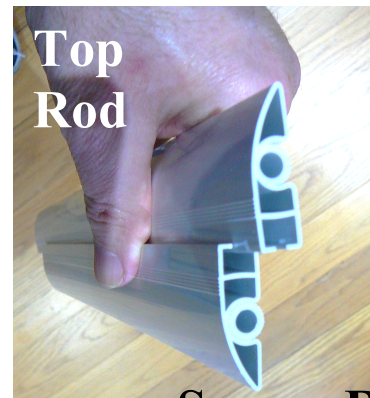

4. Either cut the Screen Rod to the required width, or leave it if you are happy for an overlap.
5. Separate the tube section at the back of the screen rod.
6. Measure the height of the doorway, or where you want the rod to be. Reduce the height by the width of the Top Rod (38mm).
7. Mark this measurement on each panel.
8. Lay the panels over the screen rod (panels must overlap) and push the dowel into the top rod trapping the panels working from the middle outwards to each end.
9. Insert the Screen Rod into the Top Rod and make sure it slides smoothly. The Top Rod thin side points upwards see picture below.
10. Hold the Screen Rod in place. It is unlikely you will get the overlaps and drop perfect first time! It will take patience.
11. Once you are happy with the way the screen looks then peel off the adhesive strip on the tape and secure above the doorway. If you want to screw in place (there are no pre-drilled holes, drill through the ridges).
12. Leave the screen in place and when you are satisfied with the overlaps and the way it touches the ground, cut the excess material from the Screen Rail.

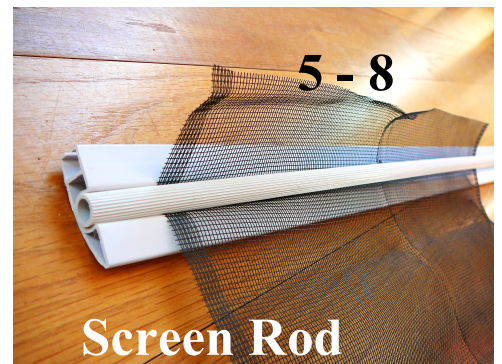

Screen Rod